

itC IP NETWORK PA SYSTEM



Please follow the instructions in this manual to obtain the optimum results from this unit. We also recommend that you keep this manual handy for future reference.

TABLE OF CONTENTS

1. SAFETY PRECAUTIONS.....	3
2. PRODUCT DESCRIPTION.....	5
3. FEATURES.....	5
4. NAME AND FUNCTION OF EACH PART.....	6
5. OPERATION	7
6. WIRING DIAGRAM	8
7. BLOCK DIAGRAM.....	9
8. SPECIFICATIONS.....	10

1. SAFETY PRECAUTIONS

- Be sure to read the instructions in this section carefully before use.
- Make sure to observe the instructions in this manual as the conventions of safety symbols and messages regarded as very important precautions are included.
- We also recommend you keep this instruction manual handy for future reference.

Safety Symbol and Message Conventions

Safety symbols and messages described below are used in this manual to prevent bodily injury and property damage which could result from mishandling. Before operating your product, read this manual first and understand the safety symbols and messages so you are thoroughly aware of the potential safety



WARNING

Indicates a potentially hazardous situation which, if mishandled, could result in death or serious personal injury.



CAUTION

Indicates a potentially hazardous situation which, if mishandled, could result in moderate or minor personal injury, and/or property damage.



WARNING

When Installing the Unit

- Do not expose the unit to rain or an environment where it may be splashed by water or other liquids, as doing so may result in fire or electric shock.
- Use the unit only with the voltage specified on the unit. Using a voltage higher than that which is specified may result in fire or electric shock.
- Do not cut, kink, otherwise damage nor modify the power supply cord. In addition, avoid using the power cord in close proximity to heaters, and never place heavy objects -- including the unit itself -- on the power cord, as doing so may result in fire or electric shock.
- Be sure to replace the unit's terminal cover after connection completion. Because high voltage is applied to the speaker terminals, never touch these terminals to avoid electric shock.
- Be sure to ground to the safety ground (earth) terminal to avoid electric shock. Never ground to a gas pipe as a catastrophic disaster may result.
- Avoid installing or mounting the unit in unstable locations, such as on a rickety table or a slanted surface. Doing so may result in the unit falling down, causing personal injury and/or property damage.

When the Unit is in Use

- Should the following irregularity be found during use, immediately switch off the power, disconnect the power supply plug from the AC outlet and contact your nearest **ITC** dealer. Make no further attempt to operate the unit in this condition as this may cause fire or electric shock.
 - If you detect smoke or a strange smell coming from the unit.
 - If water or any metallic object gets into the unit
 - If the unit falls, or the unit case breaks
 - If the power supply cord is damaged (exposure of the core, disconnection, etc.)
 - If it is malfunctioning (no tone sounds.)
- To prevent a fire or electric shock, never open nor remove the unit case as there are high voltage components inside the unit. Refer all servicing to your nearest **ITC** dealer.
- Do not place cups, bowls, or other containers of liquid or metallic objects on top of the unit. If they accidentally spill into the unit, this may cause a fire or electric shock.
- Do not insert nor drop metallic objects or flammable materials in the ventilation slots of the unit's cover, as this may result in fire or electric shock.

CAUTION

When Installing the Unit

- Never plug in nor remove the power supply plug with wet hands, as doing so may cause electric shock.
- When unplugging the power supply cord, be sure to grasp the power supply plug; never pull on the cord itself. Operating the unit with a damaged power supply cord may cause a fire or electric shock.
- When moving the unit, be sure to remove its power supply cord from the wall outlet. Moving the unit with the power cord connected to the outlet may cause damage to the power cord, resulting in fire or electric shock. When removing the power cord, be sure to hold its plug to pull.
- Do not block the ventilation slots in the unit's cover. Doing so may cause heat to build up inside the unit and result in fire.
- Avoid installing the unit in humid or dusty locations, in locations exposed to the direct sunlight, near the heaters, or in locations generating sooty smoke or steam as doing otherwise may result in fire or electric shock.

When the Unit is in Use

- Do not place heavy objects on the unit as this may cause it to fall or break which may result in personal injury and/or property damage. In addition, the object itself may fall off and cause injury and/or damage.
- Make sure that the volume control is set to minimum position before power is switched on. Loud noise produced at high volume when power is switched on can impair hearing.
- Do not operate the unit for an extended period of time with the sound distorting. This is an indication of a malfunction, which in turn can cause heat to generate and result in a fire.
- Contact your **ITC** dealer as to the cleaning. If dust is allowed to accumulate in the unit over a long period of time, a fire or damage to the unit may result.
- If dust accumulates on the power supply plug or in the wall AC outlet, a fire may result. Clean it periodically. In addition, insert the plug in the wall outlet securely.
- Switch off the power, and unplug the power supply plug from the AC outlet for safety purposes when cleaning or leaving the unit unused for 10 days or more. Doing otherwise may cause a fire or electric shock.

An all-pole mains switch with a contact separation of at least 3 mm in each pole shall be incorporated in the electrical installation of the building.

2. PRODUCT DESCRIPTION

 
Link with the fire center, used to accept the fire alarm short circuit signal.

3. FEATURES

1. Standard cabinet design, 1U height, high-grade brushed aluminum alloy panel, sophisticated technology, high-end appearance.
2. Adopt embedded industrial dual-core processing chip (ARM + DSP), start time is less than 1s.
3. 16 channels fire short circuit signal input, unlimited expansion of the input interface to facilitate bigger system.
4. Support one key to restore the factory function, ease of system maintenance and management.
5. The panel supports one key to cancel the task.
6. Standard network interface, full rate connection up to 100M.


4. NAME AND FUNCTION OF EACH PART

● Front panel

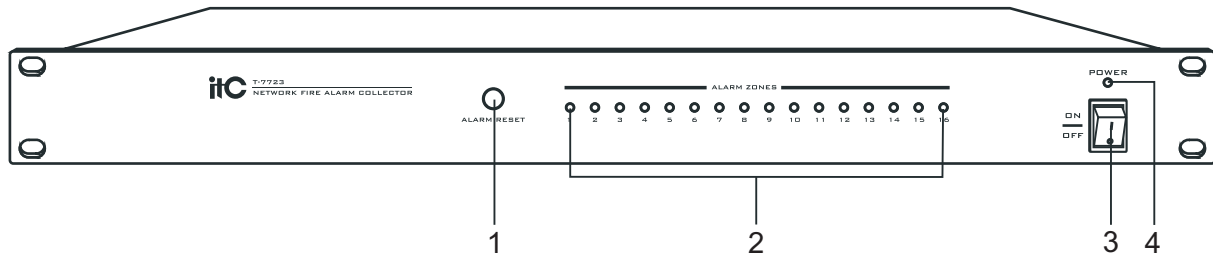

1. All zone alarm reset button. When under all zone alarm trigger status, user can press the reset button to cancel the alarm trigger status.
2. 16 channels alarm status indicator.
3. Power switch---mainly used to turn on/off machine.
4. Power indicator light---mainly used to indicate the power on/off, LED light on when machine turned on, LED light off when machine turned off.

 ● Real panel

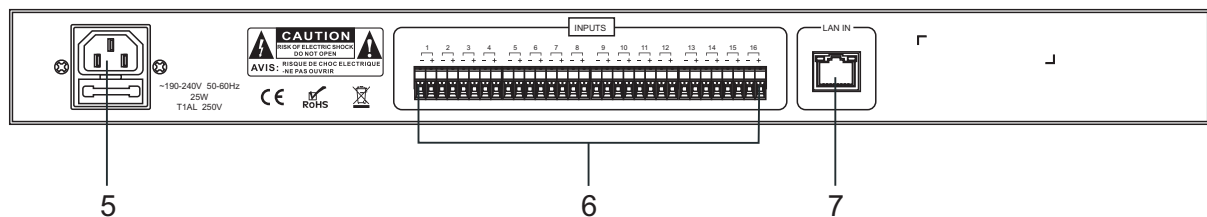

5. AC power input.
6. 16 channels alarm signal input port.
7. Network cable to connect the Ethernet port / switch.

5. OPERATION

- 1) Use network cable connect the terminal LAN IN with computer internet access or interchanger connection. Open the computer "IP network broadcasting system software" folder, select run "to run the server" program. Then choose run "configuration IP address" program, IN the pop-up dialog window, click the "query" button (figure 1), can query the terminal current IP address (figure 2), as shown in the figure below:

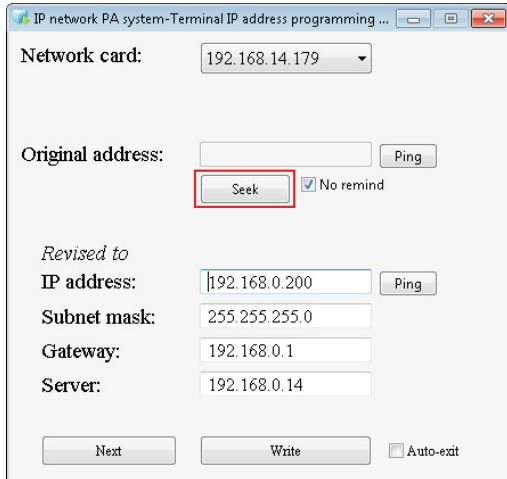 


Figure 1



Figure 2

When the system configuration requirement, it needs to modify current terminal IP address, can be manually directly change the dialogue window "IP address" item or directly press "next" button (on the basis of the current existing IP address + ascending order) as shown in figure 3. After set up the relevant parameters, click on "write" button, then press the "PING" button, check the IP address of the new modified with terminal server if it is connected, the pop-up window (figure 4), it proves the new modified IP address terminal is connected with server, close configuration "IP address" program window, complete the terminal IP address modification operations.

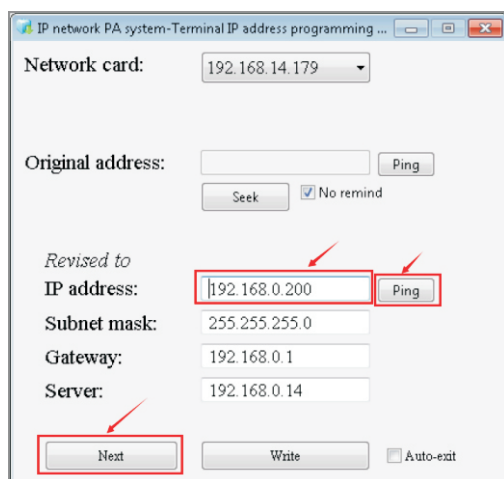 


Figure 3



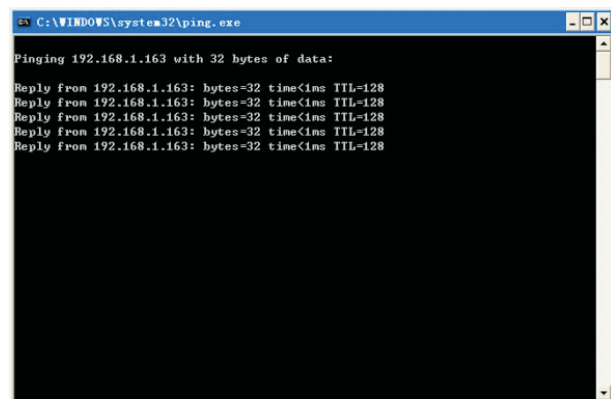 


Figure 4

 6. WIRING DIAGRAM

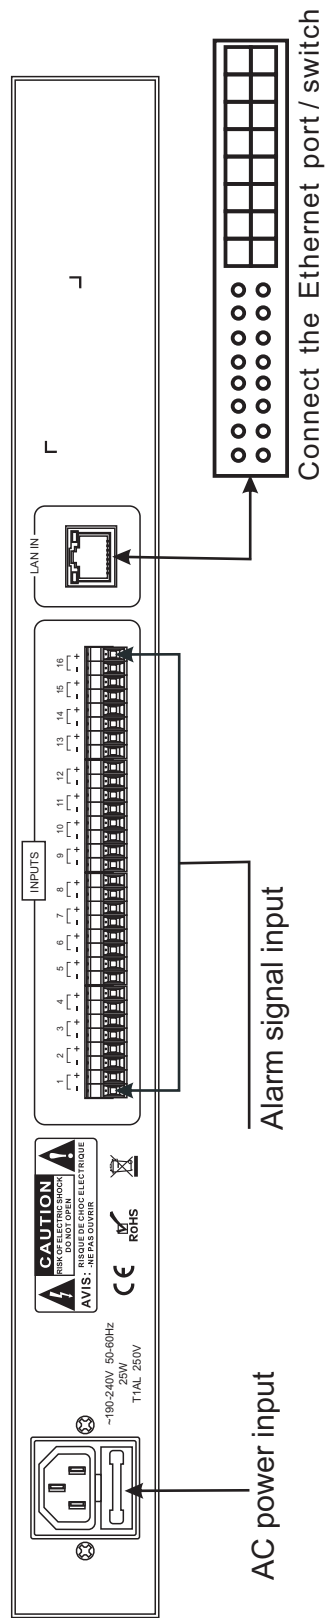

 7. BLOCK DIAGRAM

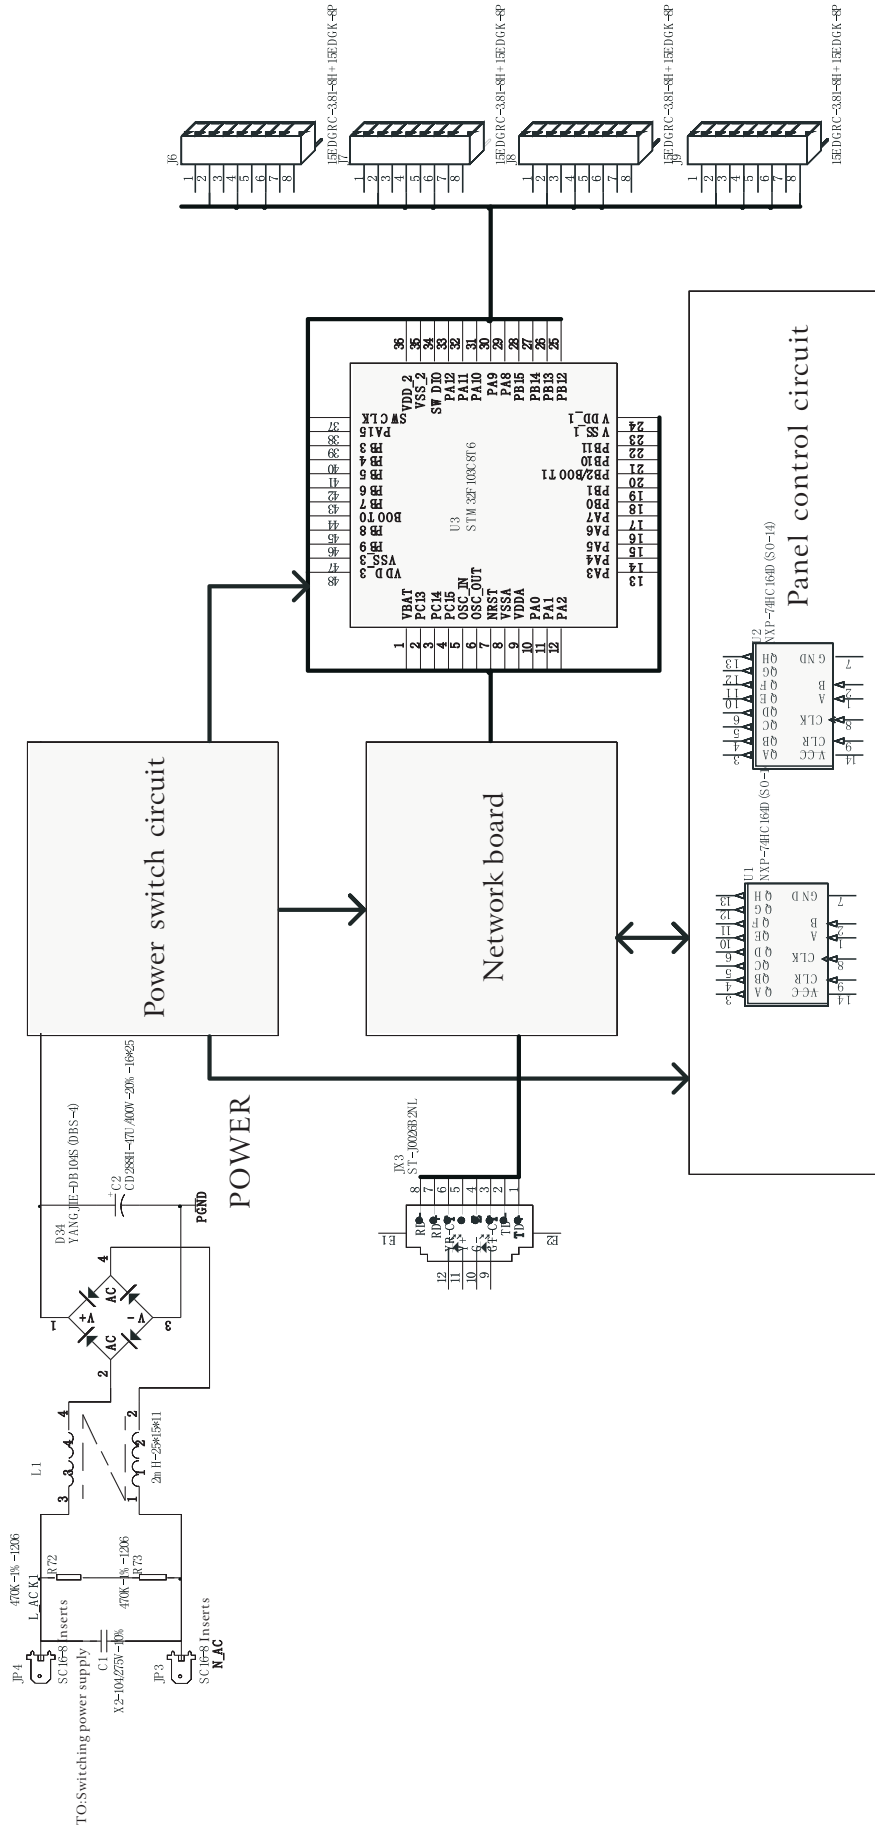

8. SPECIFICATIONS

Model	T-7723
Network Interface	Standard RJ45 input
Supportive protocol	TCP/IP, UDP, IGMP (Multicast)
Transmission rate	100Mbps
Short circuit interface	Industry standard terminals
Power consumption	≤25W
Power supply	~190-240V 50-60Hz
Dimensions	484x209x44mm
Net weight	3Kg

IP NETWORK PA SYSTEM

VersionV0.1

