

# **OPERATION MANUAL**

## **DIGITAL NETWORK PUBLIC ADDRESS & VOICE ALARM SYSTEM**

Thanks for using Digital Network Public Address & Voice Alarm System.  
For better operation, please read this manual carefully before operating the system.

## 1. Dear Readers

Thank you for using fire voice broadcasting system, in order to facilitate your understanding and the manual's description, suggestion are as follows:

### ◆ The mentioned "Voice information" in the manual includes

- Built-in EVAC, ALERT voice.
- Built-in paging and PSTN voice menu prompt tone.
- Built-in BGM, line input audio and remote paging audio.

Note: The qty of voice information of EVAC / ALERT / BGM / PROMPT memory cards cannot exceed 100.

### ◆ The system control priority

- When configuring audio operation priority, please follow the principle that manual first, then automatic, local first, then remote.
- Recommend to make Mic PTT and EVAC voice configuration with a higher priority.

It has total 39 kinds of audio signal system, in consideration of the network bandwidth, only 24 different audio signal can be sent to the system partitions, audio priority can be configured through software (when configured with backup host, the priority of the audio signals come from one host can be the same, the priority of the audio signals come from different hosts must be different).

### ◆ Some icons are described as belows



—Loop playback.



—Single cycle.



—Order play.



—Single player.



—Random Play.



—Click to adjust the output level of the current partition (It is invalid for EVAC voice and zone paging broadcasting).



—Represent the current partition output muted (volume output is 0).



—Click for monitoring audio signal of current partition.



—It means audio signal of current partition is monitored.



—Equipment or module fault appears in the system.



—It indicates that the system is currently operating in an emergency mode.



—It represents that the host is offline.



—It indicates that the network is connected.



—It represents the host starts the PSTN calling function.



—It indicates that MIC is calling.



—Green indicates that the module is working.



—Yellow indicates module failure.



—Grey indicates that the module is normal.

◆ **LED Status Description of the Equipment**

Yellow —Fault, system detect that some equipment is lost comparing to the current configuration, the normal operation of the system may be affected.

Off - indicates that the system according to the user's current configuration does not detect the equipment, or equipments work abnormally, everything runs smoothly (in the case that module is not configured, it is also off).

Green – 1. On ---- works normally; 2. Flashing ----- current partitions which are called are all switched to playing the audio with the higher priority.

Red – 1. On ---- warning; 2. Flashing ----- waiting.

◆ **The system partition status descriptions**

Partition status means that the real-time job status of local speaker loop bus, which includes the loop bus open, short-circuit, ground, normal and currently working audio. When system diagnostics speakers' partition bus that has short circuit, in order to protect the power amplifier, it will immediately stop outputting audio signal of the current partition; when system diagnostics speakers' partition bus that has grounded and open, it does not stop outputting audio signal of the current partition, but it will beep and fault indication to alert the user and record the time point of failure and failure of the partition, for the specific view, please refer to the following sections.

◆ **Attention**

1) Do not let the system equipment install in the sunlight or near a heater, because the device may become deformed or fade into the protected status due to high temperature and stop working.

2) Do not install the system device or store in a dusty, humid place, otherwise it will affect stability or cause intermittent fault when the system is working.

3) System equipment should be as far away from the strong magnetic field generated by the device, in case of high electromagnetic interferences system equipment normal operation.


- 4) System equipment are designed specifically for cabinet installation, if you install two or more units on a cabinet, between the device and the device you should set aside the corresponding space for ventilation to maintain good heat dissipation.
- 5) In order to make the system work stably, please ensure the reliability of ground connection of the equipment.
- 6) The system does not allow parallel amplifier, which may cause permanent failure.
- 7) Remote Microphone provides phantom power, real-time testing, please do not turn off the switch at work to avoid system to report failures misjudgment.
- 8) The main equipment lines of the system all have back-up, please allocate according to the actual needs. If any serious fault happens and lead to system disorder, please contact the staff for after-sales service. Do not attempt to disassemble the internal portion for personal maintenance treatment , in order to prevent permanent damage to the device or module and avoid electrical shock.
- 9) The product is the Class I device that must be connected to a power outlet with a grounding power outlet to ensure adequate grounding device.
- 10) The equipment used the power plug is disconnected from the grid power supplies, to ensure security, please pull out the power plug after using the equipment, and make sure complete loss of the power.
- 11) Because the appearance and functions of this system will continue to upgrade, but are backward compatible, any discrepancy in kind, please in kind prevail.

## 2. MIC extend unit

MIC extend unit for the Fireman remote MIC/PA Microphone keyboard extension, to provide more display and control of district / group, an MIC can be extended up to seven MIC extend unit, a keyboard will increase 8 partitions and corresponding partition status indicator.

### 2.1 Features

1. 1-click partition / group selection, simple, intuitive, and clear.
2. Showy partition working status indication.

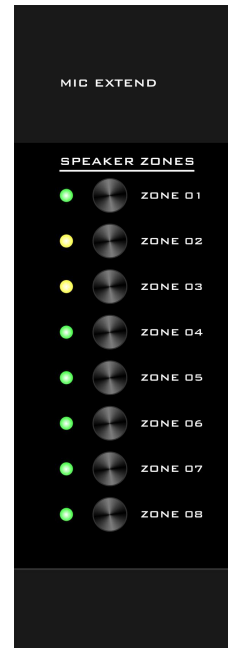


### 2.2 Front Panel

1. Partition Operation indicator.

- Off - Indicates that the current zoning status in the absence of broadcast or is not configured properly.
- Green - Indicates the current partition is broadcasting, the audio output is ordinary.
- Red - Indicates the current partition being broadcast, the output EVAC voice or remote paging. broadcast as RM / FM / PSTN and so on.
- Yellow - Indicates the current partition failure.

2. Zone / Group select button.

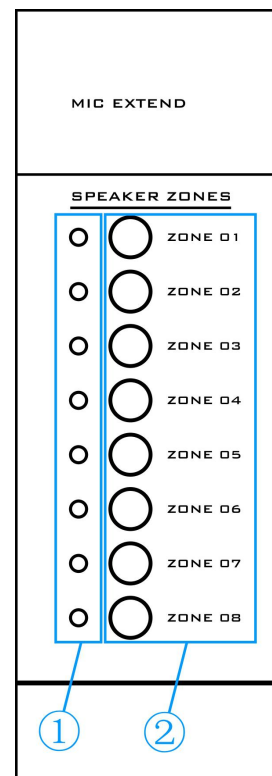

### **2.3 Technical Specifications**

Electric index	
DC power supply	
Voltage	5V DC, $\pm 3\%$
Maximum current	0.1 A
Power	0.5W
Mechanical specifications	
Dimensions (L x W x D)	66*52*149 mm
Net weight	About 0.5 kg
Installation	Desktop
Color	Black
Environmental requirements	
Operating temperature	+5°C ~ +40°C
Storage temperature	-20°C ~ +70°C
Relative temperature	<95%(Non-condensing)



