


MSA1252A – UNIVERSAL MOUNT BRACKET INSTALLATION GUIDE

BRACKET ASSEMBLY INSTRUCTIONS

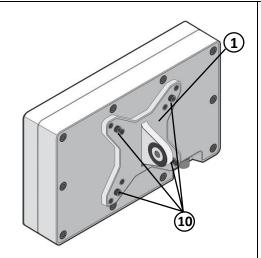

Base Assembly:


Install Base Bracket (**Item 1**) at the back of the radar unit as illustrated.

Use supplied Allen head screws (Item 10), apply tightening torque of 1.5 N/m.

Ensure that the base bracket is oriented as

Ensure that the base bracket is oriented as illustrated.


Important – Do not use the screws supplied in the radar package as these are too short!

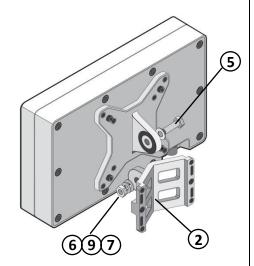

Pole Mount Installation:

Fasten the base bracket to the pole bracket (Item2) using the M8X40 (item 5) bolt and the M8 washers and nut (items 6,7,9). Adjust to desired angle and apply tightening torque of 24 N/m.

For pole diameter up to 3" see second page for mounting installation instructions. For larger diameters use stainless steel mounting straps (not included in package).

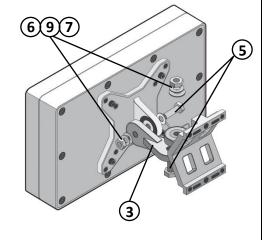


Wall Mount Installation:

Fasten the arm adapter (Item 3) to the base bracket using the M8X40 (item 5) bolt and the M8 washers and nut (items 6,7,9). Then fasten the other end of the arm to the wall bracket (Item 2).


Adjust angles and apply tightening torque of 24 N/m.



POLE MOUNTING OPTIONS

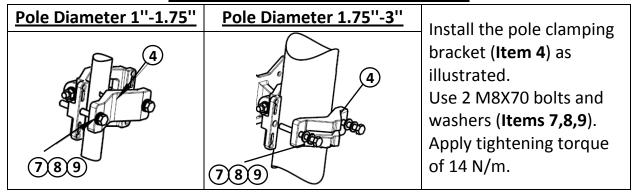

BOX CONTENTS AND ITEM DESCRIPTION

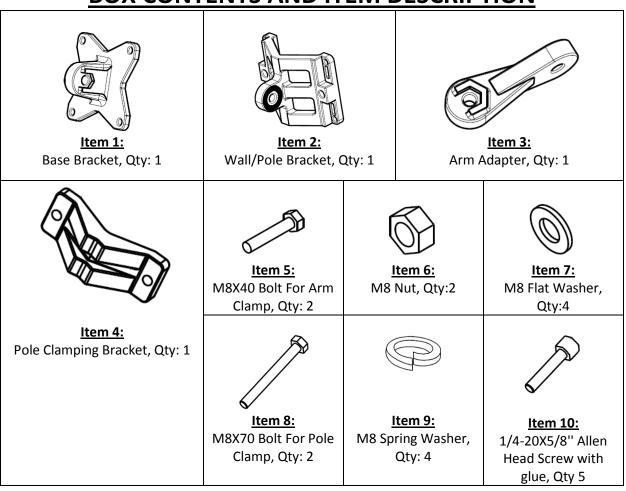

Intended for use with: SR500F/I, SR250F/I, SR1000F/I, Scepter-C



Visit us at www.magosys.com